

RACCORDO OGIVA DIRITTO
STRAIGHT JOINT WITH RING

CODICE CODE	MISURA SECTION
DTNC104	1/8 4 x 2
DTNC106	1/8 6 x 4
DTNC108	1/8 8 x 6
DTNC206	1/4 6 x 4
DTNC208	1/4 8 x 6
DTNC210	1/4 10 x 8
DTNC310	3/8 10 x 8
DTNC312	3/8 12 x 10
DTNC412	1/2 12 x 10


RACCORDO OGIVA A "L"
"L" JOINT WITH RING

CODICE CODE	MISURA SECTION
GTNC104	1/8 4 x 2
GTNC106	1/8 6 x 4
GTNC108	1/8 8 x 6
GTNC206	1/4 6 x 4
GTNC208	1/4 8 x 6
GTNC210	1/4 10 x 8
GTNC310	3/8 10 x 8
GTNC312	3/8 12 x 10
GTNC412	1/2 12 x 10


RACCORDO OGIVA INTERMEDIO
INTERMEDIATE STRAIGHT JOINT WITH RING

CODICE CODE	MISURA SECTION
DTNIC04	4 x 2
DTNIC06	6 x 4
DTNIC08	8 x 6
DTNIC10	10 x 8
DTNIC12	12 x 10


RACCORDO OGIVA INTERMEDIO "L"
"L" INTERMEDIATE JOINT WITH RING

CODICE CODE	MISURA SECTION
GTNIC04	4 x 2
GTNIC06	6 x 4
GTNIC08	8 x 6
GTNIC10	10 x 8
GTNIC12	12 x 10


RACCORDO OGIVA A "T"
"T" JOINT WITH RING

CODICE CODE	MISURA SECTION
TTMC106	1/8 6 x 4
TTMC108	1/8 8 x 6
TTMC206	1/4 6 x 4
TTMC208	1/4 8 x 6
TTMC210	1/4 10 x 8
TTMC310	3/8 10 x 8
TTMC312	3/8 12 x 10


RACCORDO OGIVA INTERMEDIO "T"
"T" INTERMEDIATE JOINT WITH RING

CODICE CODE	MISURA SECTION
TTNIC04	4 x 2
TTNIC06	6 x 4
TTNIC08	8 x 6
TTNIC10	10 x 8
TTNIC12	12 x 10


BUSSOLA DI RINFORZO
INTERNAL SUPPORT BRASS BUSH

CODICE CODE	Misura est. Section
BOI04	Ø 4
BOI06	Ø 6
BOI07	Ø 7
BOI08	Ø 8
BOI09	Ø 9
BOI10	Ø 10
BOI12	Ø 12
BOI15	Ø 15
BOI18	Ø 18
BOI20	Ø 20
BOI24	Ø 24
BOI34	Ø 34
BOI36	Ø 36


OGIVA DI SERRAGGIO IN OTTONE
BRASS RING

CODICE CODE	Misura Section
BOE04	Ø 4
BOE06	Ø 6
BOE08	Ø 8
BOE10	Ø 10
BOE12	Ø 12
BOE15	Ø 15
BOE16	Ø 16
BOE18	Ø 18
BOE22	Ø 22
BOE24	Ø 24
BOE28	Ø 28


OGIVA DI SERRAGGIO IN OTTONE
BRASS RING WITH EDGE

CODICE CODE	Misura Section
BOEB04	Ø 4
BOEB06	Ø 6
BOEB08	Ø 8
BOEB10	Ø 10
BOEB12	Ø 12
BOEB14	Ø 14
BOEB15	Ø 15
BOEB16	Ø 16
BOEB18	Ø 18


BUSSOLA RINFORZO VIVA
INTERNAL SUPPORT BUSH

CODICE CODE	Misura Section
BOI08V	Ø 8

