


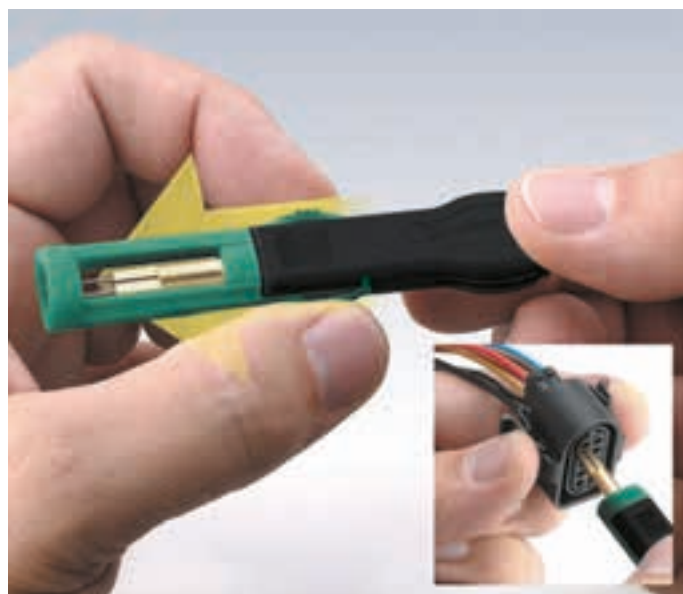

STAHLWILLE KABELLEX® Protect

For workshops and cable configuration
(KABELLEX® table see page 322)

- Bicoloured handle:
 - with locking blade cover, to protect the fine blade and guard against injury.
 - easier to handle for fine and intricate work on miniature connectors.
- Releases cable connectors quickly and easily without cutting them off – saves time and money.
- Also available in carefully selected sets.
- Special sets for vehicle makes: BMW, Mercedes-Benz, Opel, VW/Audi/Seat/Skoda/Porsche, MAN/Volvo and Renault/PSA
- Over 40 different cable extractors available.
- Blades made of extremely tough and durable chrome vanadium and special spring steel.

1501-1506 Ejection tools KABELLEX®

for round snap-in receptacles, including dismantling sleeve.



Code	No	for contact sizes Ø mm	ΔΔ g	
96 74 62 30	1501 + 1511 (e.g. BMW, Mercedes-Benz, Fiat, MAN, Opel, Porsche, Seat, Skoda, VW/Audi)	1.5	45	1
96 74 62 31	1502 + 1512 (e.g. BMW, Mercedes-Benz, Fiat, MAN, Opel, Porsche, Seat, Skoda, VW/Audi)	3.5	59	1
96 74 62 32	1503 + 1513 for ABS (lorries) please order corresponding assembly sleeve No 1523 (e.g. Mercedes-Benz, MAN, Scania) separately	4.0	79	1
96 74 62 33	1504 + 1514 (e.g. BMW, Mercedes-Benz, Opel)	2.5	60	1
96 74 62 34	1505 + 1515 (e.g. Ford, Opel, PSA, Renault)	2.3	46	1
96 74 62 35	1506 + 1516 (e.g. Mercedes-Benz trucks, MAN, Scania)	4.0	72	1

1511-1518 Dismantling sleeves KABELLEX®



Code	No	for contact sizes Ø mm	L mm	inside Ø mm	outside Ø mm	ΔΔ g	
78 60 00 01	1511 for No 1501	1.5	30	2.9	3.3	1	10
78 60 00 02	1512 for No 1502	3.5	30	4.4	5.0	1	10
78 60 00 03	1513 for No 1503	4.0	45	6.0	6.5	1	10
78 60 00 04	1514 for No 1504	2.5	30	4.0	4.4	1	10
78 60 00 05	1515 for No 1505	2.3	35	3.0	3.3	1	10
78 60 00 06	1516 for No 1506 (for 4.0 mm MOLEX-contacts)	4.0	35	5.6	6.0	1	10
78 60 00 16	1516-A for No 1506 (for 4.0 mm AMP-contacts)	4.0	30	5.4	5.8	1	10
78 60 00 07	1517 for No 1507	1.5	26	2.3	2.8	1	10
78 60 00 18	1518 for No 1508 (3 x 120° geschlitzt)	1.5	32	2.7	3.5	1	5

1523 Assembly sleeve KABELLEX® ABS

for No 1503



Code	for contact sizes Ø mm	L mm	inside Ø mm	outside Ø mm	ΔΔ g	
78 61 00 01	4.0	50	4.0	6.5	5	3

1551/1552 Cable extractor tools KABELLEX®

for flat snap-in receptacles e.g. BMW, Ford, Opel, Porsche, Seat, Skoda, VW/Audi.



Code	No	for contact sizes □ mm	ΔΔ g	
74 62 00 01	1551	2.8	19	1
74 64 00 02	1552	5.8	19	1

1553-1555 Cable extractor tools KABELLEX®

for flat plug-in sockets locked in terminals with single release channel.



Code	No	for contact sizes □ mm	ΔΔ g	
74 62 00 03	1553 (e.g. BMW, Mercedes-Benz, Ford, MAN, Opel, Porsche, PSA, Renault, Seat, Skoda, VW/Audi)	2.8; 5.8	16	1
74 62 00 04	1554 (e.g. BMW, PSA, Renault)	2.8	16	1
74 62 00 05	1555 (e.g. BMW)	5.8	16	1

1556 Cable extractor tool KABELLEX®

for flat plug-in sockets, Micro Timer II, III contacts, e.g. Mercedes-Benz, Opel, Porsche, PSA, Renault, Saab, Seat, Skoda, VW/Audi.



Code	for contact sizes □ mm	ΔΔ g	
74 62 00 06	1.6	17	1